

### 1 ENGLISH

- controllers for normal and low temperature units
- power supply 115... 230 VAC or 230 VAC (according to the model)
- cabinet probe and evaporator probe (PTC/NTC)
- door switch and multi-purpose input (according to the model)
- compressor relay 16 A res. @ 250 VAC
- sealed relays compliant with the standard EN 60079-15
- management of Embraco and Secop variable capacity compressors (according to the model)
- management of 0-10 V compressor and fans (according to the model)
- output 12 VDC max. 30 mA (according to the model)
- alarm buzzer
- TTL MODBUS slave port for EVJKEY programming key, EVconnect app, EPoCA remote monitoring system or for BMS
- hot or cold mode regulation.


Purchasing code	Number of relays	Power supply	Management of variable capacity compressors	Output 12 VDC max. 30 mA
EV3SB22N7	2	230 VAC	no	no
EV3SB24N7	4	230 VAC	no	no
EV3SB54N9	4	115... 230 VAC	yes	yes

### 1 MEASUREMENTS AND INSTALLATION | Measurements in mm (inches)

#### 1.1 User interface

To be fitted to a panel, snap-in brackets provided.


**N.B.**  
The thickness of the panel must be between 0.8 and 2.0 mm (1/32 and 1/16 in).

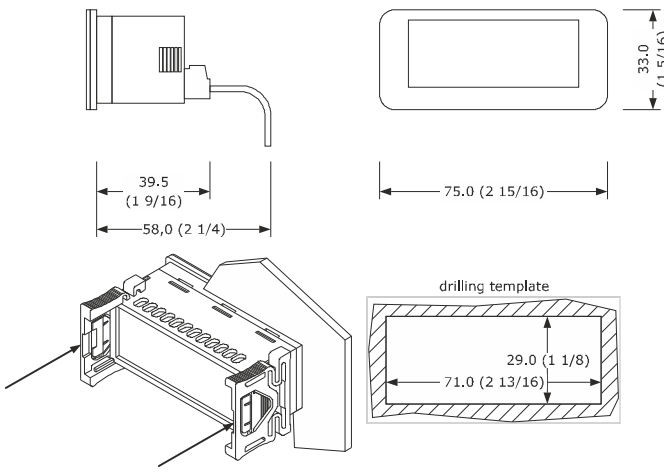

#### 1.2 Control module

To be installed on an electrical panel, on spacers (not provided).

**N.B.**  
Any metal parts must be far enough away so as not to compromise safety distances.

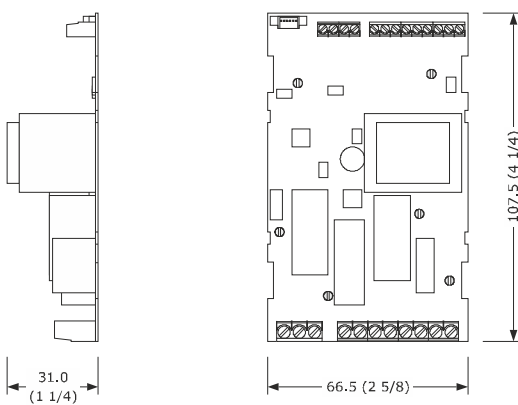


#### INSTALLATION PRECAUTIONS

- ensure that the working conditions are within the limits stated in the **TECHNICAL SPECIFICATIONS** section
- do not install the device close to heat sources, equipment with a strong magnetic field, in places subject to direct sunlight, rain, damp, excessive dust, mechanical vibrations or shocks
- In compliance with safety regulations, the device must be installed properly to ensure adequate protection from contact with electrical parts. All protective parts must be fixed in such a way as to need the aid of a tool to remove them.


### 2 ELECTRICAL CONNECTION

**N.B.**  
- use cables of an adequate section for the current running through them  
- to reduce any electromagnetic interference, locate the power cables as far away as possible from the signal cables.

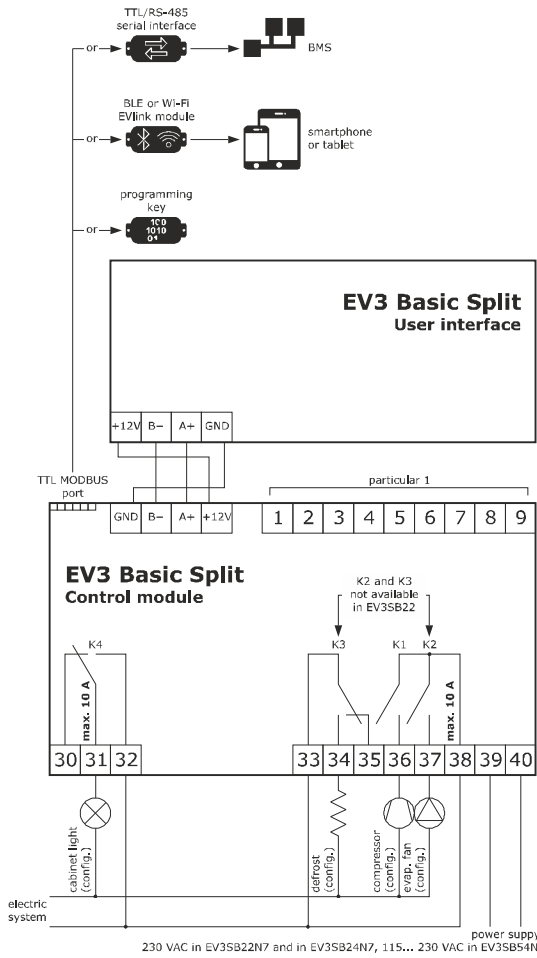


230 VAC in EV3SB22N7 and in EV3SB24N7, 115... 230 VAC in EV3SB54N9


Particular 1 for EV3SB22

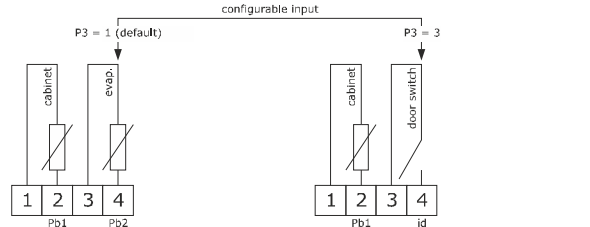

Particular 1 for EV3SB24

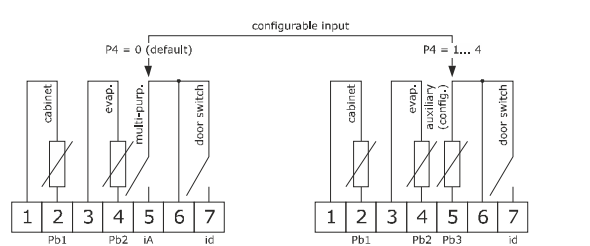

Particular 1 for EV3SB54

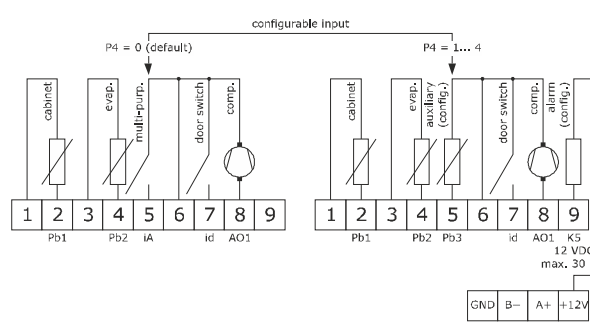

#### PRECAUTIONS FOR ELECTRICAL CONNECTION

- if using an electrical or pneumatic screwdriver, adjust the tightening torque
- if the device is moved from a cold to a warm place, humidity may cause condensation to form inside. Wait for about an hour before switching on the power
- make sure that the supply voltage, electrical frequency and power are within the set limits. See the section **TECHNICAL SPECIFICATIONS**
- disconnect the power supply before carrying out any type of maintenance
- do not use the device as a safety device
- for repairs and for further information, contact the EVCO sales network.

### 3 FIRST-TIME USE


1. Carry out the installation following the instructions given in the section **MEASUREMENTS AND INSTALLATION**.
2. Power up the device as set out in the section **ELECTRICAL CONNECTION**: an internal test will start up. The test normally takes a few seconds; when it is finished the display will switch off.
3. Configure the device as shown in the section **Setting configuration parameters**. Recommended configuration parameters for first-time use are:

PAR.	DEF.	PARAMETER	MIN... MAX.
SP	0.0	setpoint	r1... r2
PO	1	type of probe	0 = PTC 1 = NTC
P2	0	temperature measurement unit	0 = °C 1 = °F
d1	0	type of defrost	0 = electric 1 = hot gas 2 = compressor stopped

Then check that the remaining settings are appropriate; see the section **CONFIGURATION PARAMETERS**.

4. Disconnect the device from the mains.
5. Make the electrical connection as shown in the section **ELECTRICAL CONNECTION**, without powering up the device.
6. To use the device with the Evconnect app, connect the EVIF25TBX module. To use the device with the EPoCA remote monitoring system, connect the EVIF25TWX module. When connecting to an RS-485 network, connect the EVIF22TSX interface. To activate real-time functions, connect the EVIF23TSX module. **If using EVIF22TSX or EVIF23TSX, set the BLE parameter to 0.**
7. Power up the device.

### 4 USER INTERFACE AND MAIN FUNCTIONS

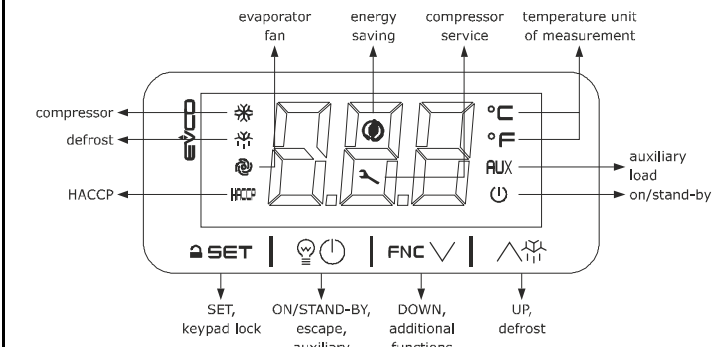

#### 4.1 Switching the device on/off

1. If POF = 1 (default), touch the ON/STAND-BY key for 4 s.

If the device is switched on, the display will show the P5 value ("regulation temperature" default): if the display shows an alarm code, see the section **ALARMS**.

LED	ON	OFF	FLASHING
☀	compressor switched on	compressor switched off	- compressor protection in progress - setpoint being set
☂	defrost or pre-drip active	-	- defrosting delay in progress - dripping active
🌀	evaporator fans on	evaporator fans off	evaporator fan stop in progress
HACCP	HACCP alarm saved in EVlink	-	-
🔌	energy saving active	-	-
🔧	compressor maintenance request	-	- settings in progress - access to additional functions in progress
°C/°F	temperature display	-	overcooling or overheating active
AUX	auxiliary load on	auxiliary load off	- auxiliary load on from digital input - auxiliary load delay in progress
🔌	device switched off	device switched on	device being switched on/off

When 30 s have elapsed without the keys being pressed, the display will show the "Loc" label and the keypad will lock automatically.

#### 4.2 Unlocking the keypad

Touch a key for 1 s: the display will show the label "UnL".

#### 4.3 Setting the setpoint

Check that the keypad is not locked.

1. Touch the SET key.
2. Touch the UP or DOWN keys within 15 s to set the value within the limits r1 and r2 (default "-40... 50").
3. Touch the SET key (or take no action for 15 s).

#### 4.4 Setting the evaporator fan speed (percentage of the maximum capacity; only available for EV3SB54, if Ao1 = 3 and F30 = 0)

Check that the keypad is not locked.

1. Touch the SET key twice.
2. Touch the UP or DOWN keys within 15 s to set the value within the limits F31 and F32 (default "50... 100").
3. Touch the SET key (or take no action for 15 s).

#### 4.5 Activating manual defrost (if r5 = 0, default)

Check that the keypad is not locked and that overcooling is not active.

1. Touch the UP key for 4 s.

If P3 = 1 (default), defrost is activated provided that the evaporator temperature is lower than the d2 threshold.

#### 4.6 Switching the cabinet light on/off (if u1c... u5c = 5)

1. Touch the ON/STAND-BY key.

#### 4.7 Switching the load on/off using the key (if u1c... u5c = 10 or 11)

1. Touch the CABINET LIGHT key (for 2 s if u1c... u5c = 5).

If u1c... u5c = 6, the demisting heaters switch on for the u6 time.

#### 4.8 Silencing the buzzer (if u9 = 1, default)

Touch a key.

If u1c... u5c = 11 and u4 = 1, the alarm output is deactivated.

### 5 ADDITIONAL FUNCTIONS

#### 5.1 Activating/deactivating the overcooling, overheating and energy saving functions in manual mode

Check that the keypad is not locked.

1. Touch the DOWN key.

FUNCTION	CONDITION	CONSEQUENCE
overcooling	r5 = 0, r8 = 1 and defrosting not activated	the setpoint becomes "setpoint - r6", for the r7 time
overheating	r5 and r8 = 1	the setpoint becomes "setpoint + r6", for the r7 time
energy saving	r5 = 0 and r8 = 2	the setpoint becomes "setpoint + r4", at maximum for the HE2 time

#### 5.2 Activating the high or low humidity function (if F0 = 5)

Check that the keypad is not locked.

1. Touch the DOWN key for 1 s.
2. Touch the UP or DOWN key within 15 s to select the label "rh".
3. Touch the SET key for 2 s until the display shows the right label for the function (only touch the key to see the function activated).

LAB.	DESCRIPTION
rhL	low humidity function (evaporator fan with F17 and F18 if the compressor is off, on if the compressor is on)
rhH	high humidity function (evaporator fan on)

4. Touch the ON/STAND-BY key (or take no action for 60 s) to exit the procedure.



